


# OPTIONAL NAILING FIN APPLICATION

Some applications require a Nailing Fin. To install door using a Nailing Fin follow the instructions below.

**1**

## SILICONE BEAD

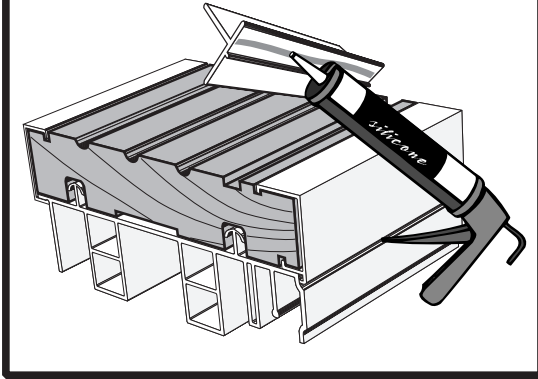

**1**

Apply a bead of silicone along the bottom of each nailing fin piece from end to end before placing it into the groove and fastening it with screws.

**2**


Position the nailing fin so that the small bottom rib is flush against the front edge of the groove in the wood as in the Fin/Screw Close Up cross section diagram. The top fin should be 4-11/16" from the inside edge of the door frame as in the Fin/Screw Position cross section diagram.

**3**

The #8 x 5/8" pan head screws are to be inserted along the back edge of the nailing fin and should be spaced apart every 8" to 10" as in the Fin/Screw Close Up cross section diagram.

**2**

## FIN/SCREW POSITION

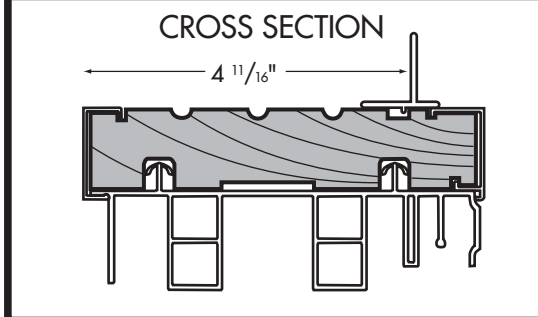


**4**

Ensure the mitred corners are tight and flush up against each other. Apply a bead of silicone along the seam of each mitred corner on both sides to seal each corner from water leakage.

**3**

## FIN/SCREW CLOSE UP

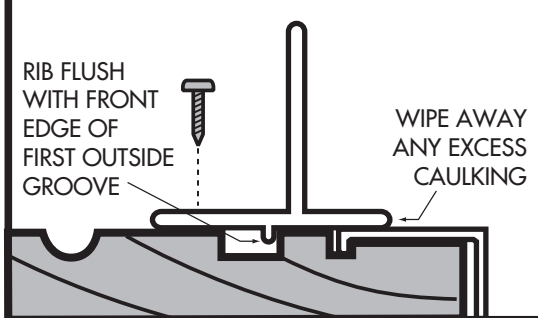

**4**

## SILICONE CORNER

